

# C2

## TELEPHONE FEATURES

### QUICK REFERENCE GUIDE

**Note:** Callers are automatically placed on hold whenever ELAN Phone Features are activated. Flash-hook or press any key (except "0") to return to the call.

#### WHOLE-HOUSE PAGE

#, <sup>PBS</sup>7 ("P" for Page)

Speak into your telephone handset to Page throughout the house over your system's speakers.



#### PHONE-TO-PHONE INTERCOM

#, <sup>PBS</sup>7 to page, then 0

Talk with someone on any other house phone (on the same line) without the conversation being heard over your system's speakers.

#### DOOR STATION COMMUNICATIONS

#, <sup>DEF</sup>3 ("D" for Door)

Connects you to the ELAN Door Station whose doorbell button was last pressed. Up to four ELAN Door Stations can also be accessed individually by following (#, 3) with the Door Station number:

- Door Station 1: #, <sup>DEF</sup>3, 1 \_\_\_\_\_
- Door Station 2: #, <sup>DEF</sup>3, <sup>ABC</sup>2 \_\_\_\_\_
- Door Station 3: #, <sup>DEF</sup>3, <sup>DEF</sup>3 \_\_\_\_\_
- Door Station 4: #, <sup>DEF</sup>3, <sup>GHI</sup>4 \_\_\_\_\_

#### DOOR LATCH ACTIVATION (Optional)

#, <sup>DEF</sup>3, 0

Activates the electronic door latch relay. Individual door latch relays can be activated by following the Door Station number with a "0". (see above)

#### HOLD

#, <sup>GHI</sup>4 ("H" for Hold)

Allows you to place a caller on HOLD (with music), hang up, and take the call on another house phone. Press any key to return to the call.

#### MUSIC MUTE

#, <sup>MNO</sup>6 ("M" for Mute)

Mutes the music coming through your system's speakers until you hang up the phone.

## RELAY ACTIVATION

#, 1, ( 1 - <sup>GH</sup>4 )

Activate up to four relay-controlled devices from your telephones.

Relay 1: #, 1, 1 \_\_\_\_\_  
Relay 2: #, 1, <sup>ABC</sup>2 \_\_\_\_\_  
Relay 3: #, 1, <sup>DEF</sup>3 \_\_\_\_\_  
Relay 4: #, 1, <sup>GH</sup>4 \_\_\_\_\_

## SYSTEM BYPASS

#, <sup>WXYZ</sup>9

Allows you to use outside phone services that require use of the # key.



## ADDITIONAL FEATURES

### DOOR CHIME SELECT/CHANGE

You may customize the Door Chime for each ELAN Door Station. Ten digitally-sampled Door Chimes are available:

- |   |                              |
|---|------------------------------|
| <b>01</b> – 8-note bells (Door 1 default) | <b>06</b> – Fog horn         |
| <b>02</b> – 4-note bells (Door 2 default) | <b>07</b> – Mean dog barking |
| <b>03</b> – 3-note bells (Door 3 default) | <b>08</b> – Sleigh bells     |
| <b>04</b> – 2-note bells (Door 4 default) | <b>09</b> – Ping             |
| <b>05</b> – “Ding-Dong”                   | <b>10</b> – Sonar blip       |

To change the Door Chime press:

#, <sup>ABC</sup>2, 0 followed by the Door Station number ( 1-4 ), then the Chime number (01-10)

### TELEMUTE

Music mutes for the duration of a telephone ring or door chime.

### ON-HOLD ALERT

A single “beep” will be broadcast through your system’s speakers if a caller has been left on HOLD for more than 1 minute.

### OFF-HOOK ALERT

A double “beep” will be broadcast through your system’s speakers if a phone is left off the hook for more than 2 minutes.

*To disable On-Hold/Off-Hook Alerts, and access additional features, please consult your C2 User’s Guide.*

*ELAN phone features may be programmed to your telephone’s Speed Dial buttons for 1-button activation.*

*ELAN phone features may also be initiated by using your telephone’s \* key instead of #. Confirm with your ELAN installer which key has been programmed for your system.*



www.elanhomesystems.com